

EIM1020VM

External Interface Module

The Power-Tronics EIM1020VM External Interface Module is an optional add-on module for select Power-Tronics voltage regulating systems designed to allow the voltage regulator to receive control signals from a Genset or VAR controller or other remote computerized control system.

The EIM1020VM is the latest upgrade to the Power-Tronics UIC product line and replaces the EIC1020, EIC10V, UIC200, UIC100, and UIC100X series Optical Interface Modules. The EIM1020VM is a very rugged and reliable interface module designed to last a lifetime.

The EIM1020VM offers 2 different modes of operation: Fully Automatic, and Automatic/Manual selectable for the convenience of the system operator.

Compared to previous EIC and UIC products, the EIM1020VM offers superior 4-20mA signal compatibility and delivers a more linear adjustment range. The EIM1020VM output terminals contain a loading resistor to better match the adjustment range of a manual potentiometer when using the Automatic/Manual wiring configuration.

The Power-Tronics EIM1020VM is fully encapsulated to ensure a long service life and protect the unit from moisture or external contamination.

The EIM1020VM is compatible with select Power-Tronics Universal Voltage Regulators and Static Exciters.

Specifications

Input Signal:	0-10VDC* or 4-20mA
Maximum Input Burden:	1mA in 0-10V mode 20mA in 4-20mA mode
Input Impedance:	>20KΩ in 0-10V mode 500Ω in 4-20mA mode
Maximum Output Burden:	100mA
Output Impedance:	0-100KΩ
Adjustment Range:	±10%
Effective Control Range:	1.5-10VDC or 2-20mA
Electrical Isolation:	Optical, 3750VACrms
Physical Size:	4.05 x 2.1 x .75 in.
Weight:	2.5 oz
Fully Encapsulated:	Yes

* Can be used with +/-10VDC control signals by programming the control device to use a positive signal offset.

Table of Contents

Introduction and Functional Description:.....3

0-10VDC Fully Automatic Operation Hookup:.....4

0-10VDC Automatic/Manual Selectable Operation Hookup:.....5

4-20mA Fully Automatic Operation Hookup:.....6

4-20mA Automatic/Manual Selectable Operation Hookup:.....7

Terminal Compatibility Chart.....8

Initial Setup and Commissioning:.....9

Installation Warranty Form:.....10

Product Warranty Certificate:.....11

Introduction and Functional Description

Caution: Read This Installation Manual Carefully and Entirely!

Warning: Do not use digital equipment to read voltage, Hz, or amperage during this installation. Use only Analog sensing equipment! Failure to do so may result in damage to equipment or in personal injury!

ALWAYS perform all setup procedures off-line

ALWAYS wear eye protection

ALWAYS strip wire insulation properly or use insulated connectors

ALWAYS use analog metering equipment when setting up the regulator

ALWAYS ensure the regulator receives ample airflow

NEVER hold the regulator in your hand when energized

NEVER install the regulator in a place it can get wet or is exposed to the elements

NEVER mount the regulator over a screw, bolt, rivet, welding seam, or other fastener

NEVER remove the regulator cover while the unit is in operation

NEVER insert a screwdriver or other object under the regulator cover

NEVER install a switch in the DC portion of the regulator's wiring

NEVER touch any exposed portion of the EIM1020VM when in operation

NEVER USE A DIGITAL FREQUENCY METER (It can give a false reading!)

Functional Description

The Power-Tronics EIM1020VM is an optional add-on module for select Power-Tronics voltage regulating systems and phase controllers designed to allow the voltage regulator (or phase controller) to be controlled by an external Genset or VAR controller.

Instead of using a manual or motorized potentiometer for control, the EIM1020VM allows a completely solid-state solution for remote adjustment. The EIM1020VM is capable of interpreting 0-9VDC, 0-10VDC, or 4-20mA signals with minimal adjustment. It can also interpret +/-9V and +/-10V signals by programming the issuing controller to use a positive offset signal.

Instead of linking the control signal directly to the voltage regulator's circuitry, the EIM1020VM contains an optical isolation circuit, which allows the control system to be completely isolated from the voltage regulating circuitry. The EIM1020VM also has a maximum current draw of 20mA to conform to industry standard PLC based controls.

Due to its reliable design and complete encapsulation, the EIM1020VM is designed to provide reliable service for a lifetime when properly installed.

For Technical Support:

Visit our website at: www.power-tronics.com

Call Us at: (830) 895-4700

0-10VDC Fully Automatic Operation

This configuration should be used if the EIM1020VM is to be used in an unattended application, or if manual voltage control is not needed on your application.

NOTE: This instruction manual only contains instructions for your EIM1020VM's connection to the voltage regulator or phase controller. For wiring details regarding your voltage regulator or phase controller, see the instructions that came with your model.

NOTE:


For +/-9V or +/-10V Control Signals, please program your genset controller with the following positive offset values:

+/-9V or +/-10V: +6VDC

NOTE:

All wiring to and from the EIM1020VM should be in shielded cable with the shield UNGROUNDED for best operation!

Control Signal From Genset Controller
0-9VDC, 0-10VDC



XR or UVR Series Voltage Regulator, or
UVR, XR, or PC series Phase Controller

**SEE PAGE 8 FOR FULL TERMINAL
COMPATIBILITY CHART!**

For Technical Support:


Visit our website at: www.power-tronics.com

Call Us at: (830) 895-4700

0-10VDC Automatic/Manual Selectable Operation

This configuration should be used if the EIM1020VM is to be used in an installation where manual voltage adjustment is required or is important for redundancy.

NOTE: This instruction manual only contains instructions for your EIM1020VM's connection to the voltage regulator or phase controller. For wiring details regarding your voltage regulator or phase controller, see the instructions that came with your model.

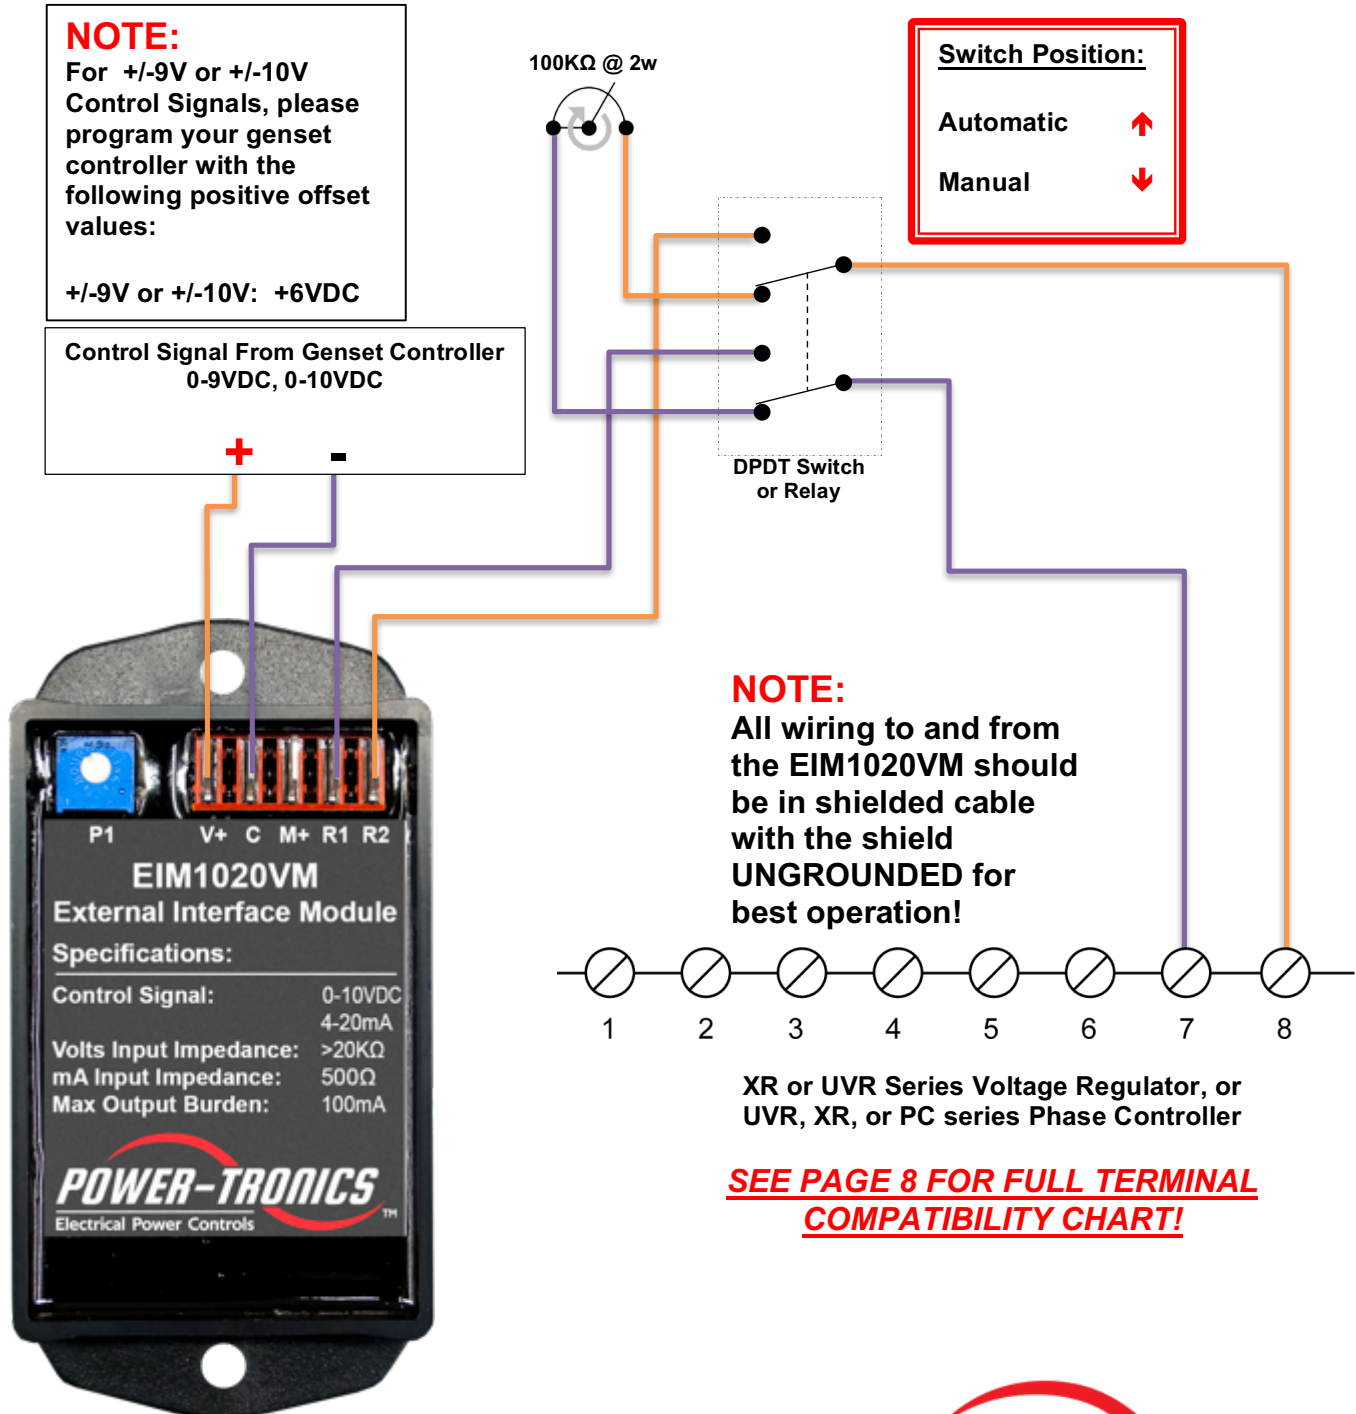

For Technical Support:


Visit our website at: www.power-tronics.com

Call Us at: (830) 895-4700

4-20mA Fully Automatic Operation

This configuration should be used if the EIM1020VM is to be used in an unattended application, or if manual voltage control is not needed on your application.

NOTE: This instruction manual only contains instructions for your EIM1020VM's connection to the voltage regulator or phase controller. For wiring details regarding your voltage regulator or phase controller, see the instructions that came with your model.

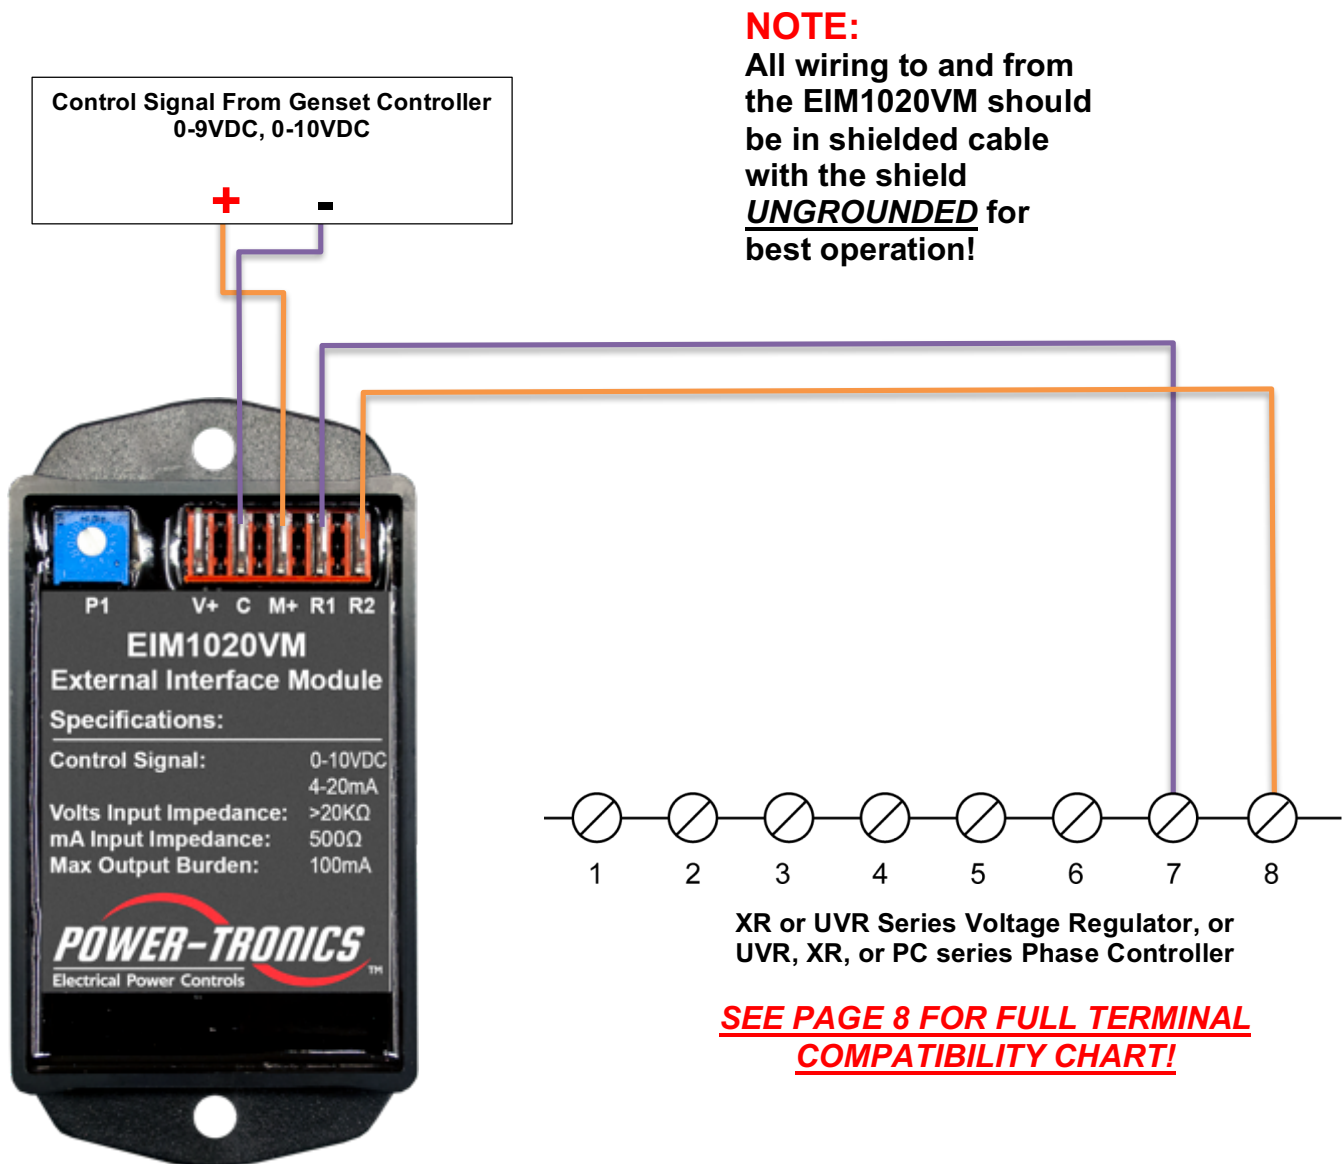

For Technical Support:


Visit our website at: www.power-tronics.com

Call Us at: (830) 895-4700

4-20mA Automatic/Manual Selectable Operation

This configuration should be used if the EIM1020VM is to be used in an installation where manual voltage adjustment is required or is important for redundancy.

NOTE: This instruction manual only contains instructions for your EIM1020VM's connection to the voltage regulator or phase controller. For wiring details regarding your voltage regulator or phase controller, see the instructions that came with your model.

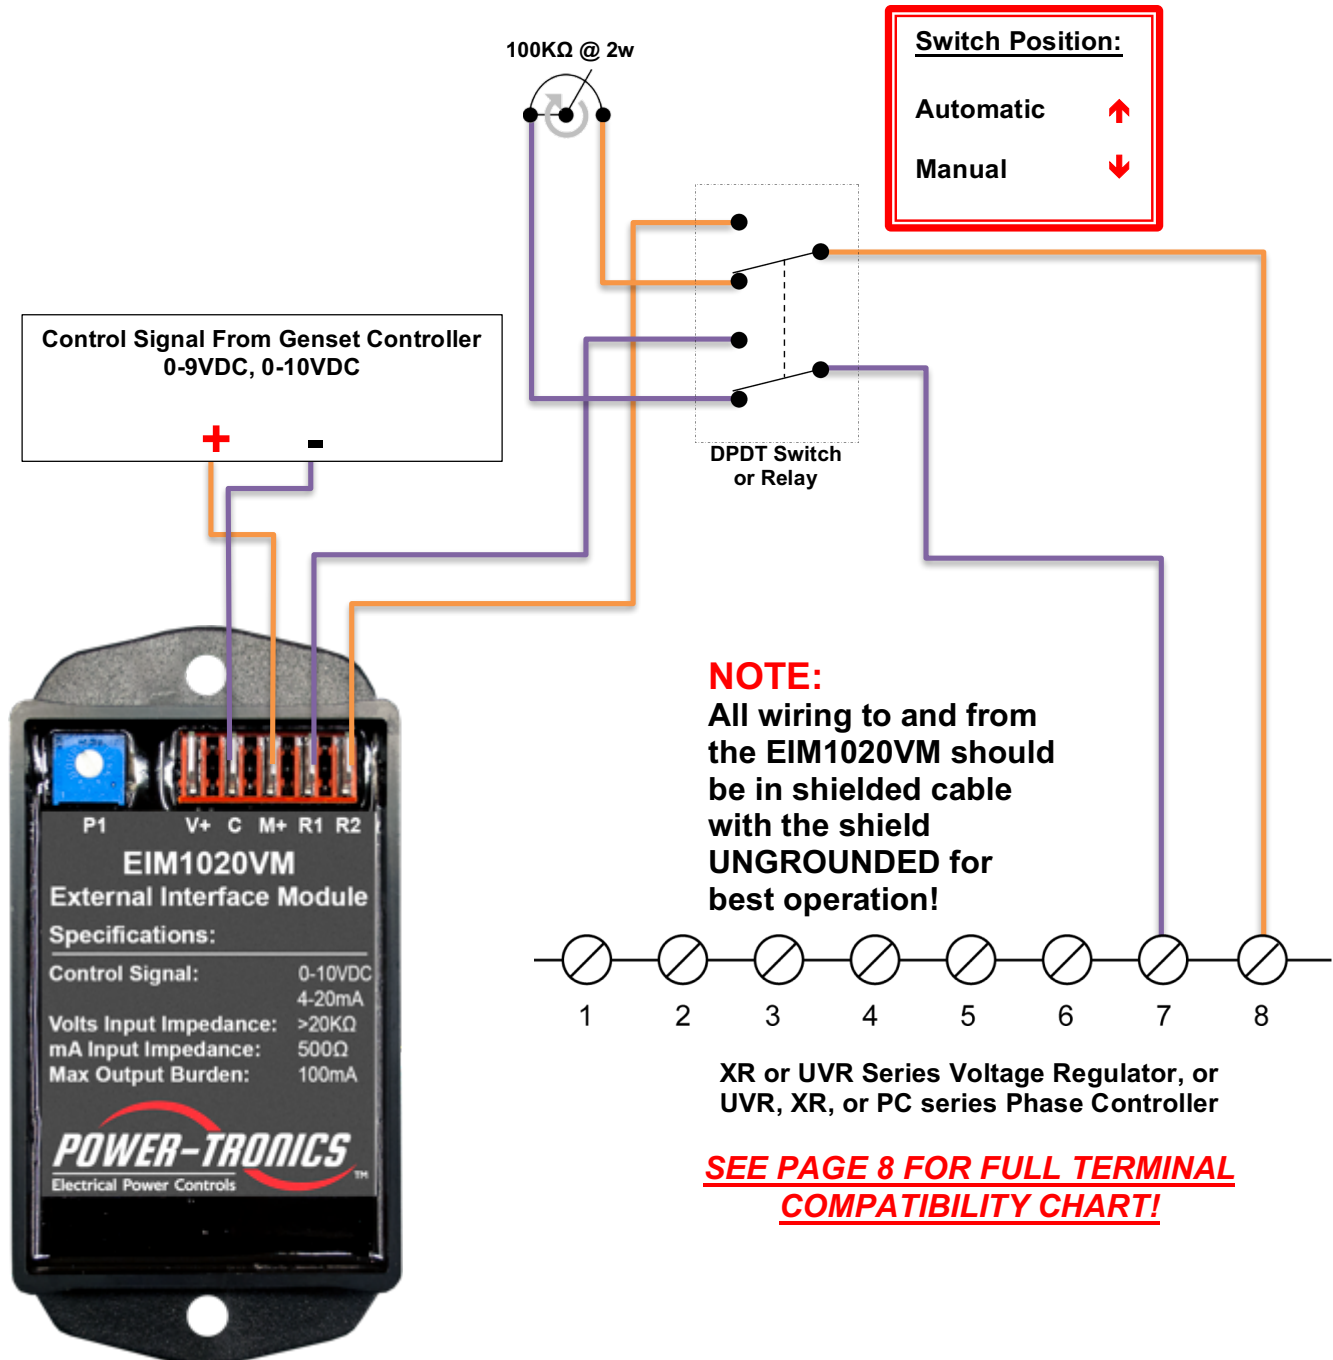

For Technical Support:

Visit our website at: www.power-tronics.com

Call Us at: (830) 895-4700

Terminal Compatibility Chart

This chart gives terminal compatibility and crossover information for all Power-Tronics voltage regulators and Static Exciters that are compatible with the EIM1020VM External Interface Module

EIM1020VM Terminal:

R1

Connects To:



All UVR & XR Series Voltage Regulators:

Terminal 7

All SE1500 and Single-Phase SE2000AX/F, SE2000BX/F, SE3000BX, SE6000BX Static Exciters:

Terminal E on TB2

All 3-Phase SE2000, SE3000, SE6000 Static Exciters WITHOUT internal UIC200 Option:

Terminal F on TB3

All Static Exciters using VRMSE series Control Module:

Terminal R1

All Phase Controls using PCM series Control Module:

Terminal R1

SPXR-DC10, DC125i & DC250i:

Terminal R1

EIM1020VM Terminal:

R2

Connects To:



All UVR & XR Series Voltage Regulators:

Terminal 8

All SE1500 and Single-Phase SE2000AX/F, SE2000BX/F, SE3000BX, SE6000BX Static Exciters:

Terminal F on TB2

All 3-Phase SE2000, SE3000, SE6000 Static Exciters WITHOUT internal UIC200 Option:

Terminal G on TB3

All Static Exciters using VRMSE series Control Module:

Terminal R2

All Phase Controls using PCM series Control Module:

Terminal R2

SPXR-DC10, DC125i & DC250i:

Terminal R2

For Technical Support:

Visit our website at: www.power-tronics.com

Call Us at: **(830) 895-4700**

Initial Setup and Commissioning

1. Install the EIM1020VM and wire according to the correct wiring diagram 0-10VDC, 4-20mA (Fully Automatic, or Selectable Automatic/Manual).
2. Start up the generator and bring the engine up to design speed, then manually adjust the voltage regulator to just below no-load voltage (See the manual that came with your voltage regulator for these instructions).
3. Adjust the Genset or VAR controller to provide a small positive voltage (6VDC or 12mA) at no-load.
4. Adjust the voltage regulator to rated no-load voltage using its internal controls.
5. The effective range of the EIM1020VM is determined by the equipment it is connected to. Compatible Power-Tronics Products manufactured from 2017 and onwards provide a $\pm 10\%$ control range when using the EIM1020VM. Earlier products will have a reduced range, typically $\pm 7\%$.
6. The EIM1020VM is designed to provide a roughly linear control range across its rated input signal range. Effective control range is 1.5-10VDC or 2-20mA, this is due to the saturation voltage of the internal optical coupler circuitry. Best results are obtained from 2.5-10VDC or 4-20mA. Control output range is centered at 6VDC or 12mA. 2.5VDC or 4mA will bias the control output range to its minimum value of -10%. 10VDC or 20mA will bias the control output range to its maximum value of +10%.
7. Place the generator online and observe its operation. You should not have to readjust these settings after the initial installation.
8. If the adjustment range is too great, it may be reduced by turning the adjustment potentiometer P1 counter-clockwise. **Note that this adjustment only affects the 0-10VDC input mode, 4-20mA mode is a fixed adjustment range.**



For Technical Support:

Visit our website at: www.power-tronics.com

Call Us at: (830) 895-4700

Installation Warranty Form

It is very important that you fill out this form completely when installing a voltage regulator. This form serves as a history record on the application. This form also contains the information needed by Power-Tronics, Inc., for repair and troubleshooting of any product you may be having problems with.

Failure to fill out this form during installation will result in a cancellation of your warranty coverage! Filling out this form takes only minutes but will save hours or days later on if your product should require service!

Submit Online at: www.power-tronics.com/warranty

Submit Online at: www.power-tronics.com/warranty

Product Model:		Additional Module(s) or Options:	
Serial #:			
Date of Installation:			
<u>This Section for Brushless Generators Only</u>			
Exciter Field Voltage:		Exciter Field Resistance:	
<u>This Section for Brush-Type Generators Only</u>			
Shunt-Field Voltage:		Shunt-Field Resistance:	
Rotor Resistance @ Brush Leads:		Rotor Resistance on Slip-Rings:	
Rotor Excitation Voltage:			
<u>Generator Wiring/Usage Information</u>			
Generator Leads (Check One:) <input type="checkbox"/> 12 <input type="checkbox"/> 10 <input type="checkbox"/> 6 <input type="checkbox"/> 4 (3Ø) <input type="checkbox"/> 4 (1Ø) <input type="checkbox"/> 3			
Generator Wiring Mode (Check One:) <input type="checkbox"/> High-Wye <input type="checkbox"/> Low-Wye <input type="checkbox"/> Series Delta <input type="checkbox"/> Zig-Zag <input type="checkbox"/> Double-Delta <input type="checkbox"/> Single-Phase <input type="checkbox"/> Other			
Terminal Voltage:		Residual AC Voltage:	
Rated KW:		Rated KVA:	
Primary Load (Please Explain):			
<u>Repair/Warranty Request Information</u>			
Company Name:			
Contact Person:			
Telephone Number:			
Email Address:			
Ship-To Address (City, State, Zip, Country):			
Problem Description/History (Please be detailed!!!):			

For Technical Support:

Visit our website at: www.power-tronics.com

Call Us at: **(830) 895-4700**

PRODUCT WARRANTY

Power-Tronics, Inc., assumes no liability for damages due to incorrect voltage or other voltage related damages resulting from either output of the generator or input to the generator exciter system. These problems should be protected with external devices provided by the customer such as ***fuses, surge suppressors, over/under voltage and frequency controls.***

Power-Tronics, Inc., warranties **only parts and workmanship** of this product for a **period of 3 years from the original date of purchase from Power-Tronics, Inc.** Under warranty, Power-Tronics, Inc. will replace, exchange or repair the defective product **without labor or parts cost to the customer.** Remaining warranty of the original product will be transferred to the replaced or repaired product. To obtain warranty, a copy of the original Installation Warranty Form must be sent in with the defective product, which clearly shows the purchase date and serial number of the defective part. A repair request form must be sent in with the product before repairs will begin. You can obtain this form by contacting Power-Tronics, Inc.

Send repairs to: Power-Tronics, Inc., 2802 Cobbler Ln., Kerrville Texas USA 78028.

Send in repairs only by UPS or FedEx. USPS will NOT deliver to our facility!

Any one of the following conditions will void the warranty:

- ❖ Overheating of the power supply resistor on the printed circuit module.
- ❖ Overheating of the SCR or freewheeling diode.
- ❖ Physical damage to the printed circuit module, housing or components.
- ❖ Unauthorized repair or alteration of printed circuit module.
- ❖ Installation by anyone other than a qualified professional generator service technician.
- ❖ Conductive or corrosive contamination of the circuit module.
- ❖ Removal of our company identification from the product.
- ❖ Removal of any conformal coating of the printed circuit module or components.
- ❖ Overheating of foil on the printed circuit module.
- ❖ Inappropriate or infeasible application.
- ❖ Use with any external device other than manufactured by Power-Tronics, Inc.
- ❖ Failure to fill out the attached warranty module during installation

No other warranty is expressed or implied.

For Technical Support:

Visit our website at: www.power-tronics.com

Call Us at: (830) 895-4700